

# From Vigortone . . .

## Dohrect Silage Equipment



The revolutionary Dohrect Enject Systems include an insulated tank and ice packs. This is designed to help keep the bacteria cool to prolong a healthy life. The lid on the insulated tank is the full diameter to make for easy cleaning of the tank. This tank is also easy to remove from the base for ease of cleaning. A flush system is standard on all units, making flushing the pump and lines simple and easy. The DE-1000 now includes the FM-1000 Flowmeter for easy calibration, making the system even easier to use.

The installation on the Dohrect Enject System is quite simple, especially compared to conventional systems due to their compact size. The baseplate is only 16 inches square and the complete unit stands only 24" high. The DE-1000 includes 35' of power cord with the connections pre-wired making wiring very simple.

This is a "Low Volume, Long Distance Applicator." Just mix your product at a rate up to 100 treatable ton per gallon of water, applying the product solution at a rate as low as 1.28 ounces per ton (maximum 5 tons per minute). Mixing is made easy with a mixing jug (included). Now system setup is simple with the New FM-1000 Flowmeter, turn the system on and simply float the calibration ball up to the desired output, making calibration quick and accurate. Easy "on the fly" adjustments are made using the SP-2 Control Unit, which is specifically designed for the use on the Dohrect Enject Systems, and is standard with every DE-1000.




### Model DE-1000 . . . . . **\$925\*** *Includes FM-1000 Flowmeter (now standard)*

The DE-1000 Dohrect Enject System has a 10 gallon insulated container which is large enough to mix up to 1000 treatable ton of product per tank fill. Smaller batches may easily be made using the graduation on the inside of the tank marking every gallon. Calibration has been made easy. Each DE-1000 includes the New FM-1000 Flowmeter (see below for more details). At the end of the day, if there is any product remaining, ice packs may be added for overnight storage or the unit can easily be removed for refrigeration. To use this

applicator with a pull-type chopper, the CM-2 Chopper Mount is required (see below).

### FM-1000 Flowmeter . . . . . **\$89\*** *For use with Dohrect Inject System*

The FM-1000 Flowmeter is now standard on every DE-1000 and can easily be added to existing Dohrect Enject Systems. This flowmeter is designed exclusively for the DE-1000 to make calibration simple and easy. This unit reads in Tons per Minute (100 ton per gallon rate) on one side and ounces per minute on the other. Simply float the calibration ball to your desired application rate and calibration is done. Mounting is done with an aluminum swivel bracket that can be mounted to a flat surface or can be mounted to a railing using the U-bolt included.

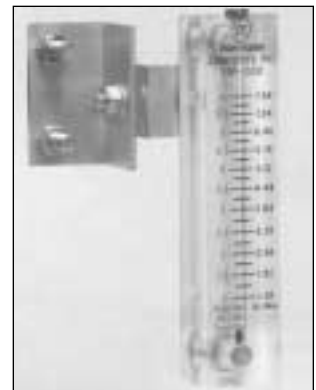

### CM-2 Chopper Mount . . . . . **\$35\***

The CM-2 Chopper Mounting Kit (pictured to the left with a DE-1000 mounted) can be used for mounting the DE-1000 Dohrect Enject System on pull-type choppers or baggers. The concentrate solution can be mixed accordingly for these applications.

\*List price

**All prices are FOB St. Cloud, MN. All UPS charges will be added to each customer order.**